







# Tips for using your TiVo® remote control in the TiVo menus

When you're using the TiVo menus, the remote control buttons do the following:



## 1 CHANNEL UP/DOWN:

- Use the **CHANNEL UP/DOWN** button to page up or down through lists of menu items.

## 2 THUMBS UP™:

- In TiVo with HD menus, you can use the **THUMBS UP** button to mark any video provider, category, or collection as a favorite.

## 3 PLAY:

- Highlight a recording in My Shows or the Now Playing List and press the **PLAY** button to start viewing it.

**TIP:** To watch all shows in a folder in order, from oldest to newest, highlight a folder in My Shows or the Now Playing List and press the **PLAY** button.

## 4 INSTANT REPLAY:

- In Search, press the **INSTANT REPLAY** button at any time to start a new search.
- In TiVo with HD menus, press the **INSTANT REPLAY** button to go back a screen.

## 5 ADVANCE:

- Use the **ADVANCE** button to jump-to-end/jump-to-beginning of long lists such as My Shows or the Now Playing List.
- When in the channel list, use the **ADVANCE** button to enter a dash for channel numbers that contain a dash.
- In Search, press the **ADVANCE** button to skip straight to the first item in the results list.

## 6 A, B and C buttons (where applicable; check for the on-screen tips):

- Depending on which menu you're in, pressing the **A** button will bring up an options screen.  
**TIP:** To find only HD movies, go to 'Find TV, movies, & videos' > 'Browse TV & movies' > 'Movies'; pick your favorite category, then press the **A** button and change "HD only" to "Yes."  
To find only 4-star movies, go to 'Find TV, movies, & videos' > 'Browse TV & movies' > 'Movies'; pick your favorite category, then press the **A** button and change "Rating" to "4 Stars."
- Depending on which menu you're in, pressing the **B** button will toggle through sort options.  
**TIP:** Press the **B** button in My Shows or the Now Playing List to switch between sorting your shows by name and by date.
- Depending on which menu you're in, pressing the **C** button will toggle through filter or grouping options.

## 7 NUMBERS BUTTONS:

- Press the **1** button while in TiVo Central® to quickly jump to the Season Pass® Manager.
- Press the **2** button while in TiVo Central to jump to the To Do List.
- Press the **3** button while in TiVo Central to jump to WishList® Search.
- Press the **4** button while in TiVo Central to jump to Search.
- Press the **5** button while in TiVo Central to jump to Browse TV & Movies.

## 8 CLEAR:

- Press the **CLEAR** button to delete a title in a list (such as the To Do List).

**TIP:** To delete whole groups of shows, highlight a folder in My Shows or the Now Playing List and press the **CLEAR** button.

## 9 ENTER/LAST:

- In Search, press the **ENTER/LAST** button to filter or sort the search results.

## Tips for using your TiVo® remote control while using the TiVo program guide

When you're using the TiVo program guide, the remote control buttons do the following:

### 1 INFO:

- Press the **INFO** button to access Guide Options.

**TIP:** In TiVo with HD menus, you can also press the **A** button to access Guide Options.

### 2 CHANNEL UP/DOWN:

- The **CHANNEL UP/DOWN** button pages up or down through lists of programs.

### 3 INSTANT REPLAY:

- Press the **INSTANT REPLAY** button to jump back 24 hours.

### 4 ADVANCE:

- Press the **ADVANCE** button to jump forward 24 hours.

### 5 ENTER/LAST:

- Press the **ENTER/LAST** button to access Guide Options.

**TIP:** In TiVo with HD menus, you can also press the **A** button to access Guide Options.

